



Sauter GmbH

Ziegelei 1
D-72336 Balingen
e-mail: info@kern-sohn.com

Phone : +49-[0]7433- 9933-0
Fax: +49-[0]7433-9933-149
Internet: www.sauter.eu

Instruction manual manual test bench

SAUTER TVL/TVL-XL

Version 2.0
04/2020
GB



PROFESSIONAL MEASURING

TVL_TV-L-XL-BA-e-2020



SAUTER TVL/TVL-XL

V. 2.0 11/2020

Instruction manual manual test bench

Thank you for purchasing the manual crank test stand from SAUTER. We hope that you will be very satisfied with the high quality of this measuring system with its high reproducibility. For any questions, wishes and suggestions please do not hesitate to contact us.

Table of contents:

1	Scope of delivery	3
2	Warnings	3
3	Technical description	3
3.1	Technical data test bench	3
3.2	Technical data length measuring unit LA (without serial interface)	4
4	Maintenance	4


1 Scope of delivery

- SAUTER TVL
- A hook

2 Warnings

Incorrectly performed force measurements can lead to serious injury to persons and damage to property and must therefore only be performed by trained and experienced personnel.

In particular, it should be avoided that forces are applied to the measuring device by the test stand which exceed the maximum load (Max) of the test stand or the measuring device or which do not act on the device axially via the test stand.

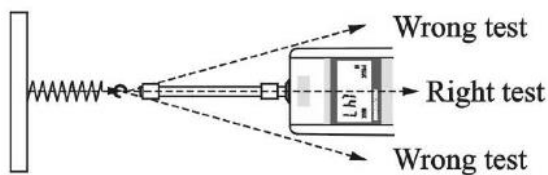

3 Technical description

3.1 Technical data test bench

	TVL	TVL-XL
maximum force	500N	
Measurement direction	vertical and horizontal	
Spindle stroke per revolution	3mm	
Mounting height of upper hook from base plate	Approx. 470mm	Approx. 720
Thread hook	M6	
Spindle height from base plate	230mm	
Thread of the encoder mounting plate	4x M3 (included in delivery)	
Workspace	Approx. 200mm	Approx. 450mm
Weight	8kg	15kg

3.2 Technical data length measuring unit LA (without serial interface)

	TVL	TVL-XL
Scale length	200mm	
Readability	0,01mm	
Control buttons		
On/0	<ul style="list-style-type: none">• Switch on• Zeroing the display of the LA	
mm/in	Change of units between millimeters and inches	
▲	Manual length preselection, upwards	
▼	Manual length selection, downwards	

4 Maintenance

To avoid rust, the test stand should be cleaned with a soft cloth after each use. Under no circumstances should aggressive cleaning agents be used.