

Opening lamp housing of FL unit for OBN-14, OCM-16

Step 1:

- Loosen the Allen screw (3 mm) on the top of the lamp housing



Step 2:

- Pull the top part of the housing upwards until it gets separated from the bottom part



Step 3:

- The top part (left) contains the holder where the lamp needs to be installed

