KERN BALANCES & TEST SERVICES 2022

KERN

Design kitchen scale KERN FGE







II FGE 5K-3S05

FGE 10K-3S05









The price breaker! Most economical kitchen scale in the KERN assortment

Precise design kitchen scale for kitchen, cafeteria, gastronomy

Features

- FGE 10K-3S05: Weighing plate made out of safety glass
- hygienic and easy to clean
- Low overall height for secure footing and space-saving storage
- Secure and non-slip positioning through rubber feet
- Very easy to use FGE 5K-3S05: 2 Buttons FGE 10K-3S05: 1 Button
- Comfortable taring with just one keystroke. For example, you can tare a bowl before starting a formulation. In addition, you can tare each time you weigh in a formulation ingredient, so that you can weigh in the next formulation ingredient with the weight indicated in the formula without having to do any calculations
- Integrated AUTO-OFF function to preserve the batteries
- I Large high-contrast display that is easy to read

Technical data

FGE 5K-3S05

- Large backlit LCD display, digit height 18 mm
- Overall dimensions W×D×H 152×230×15 mm
- Dimensions of glass weighing plate W×D
 152×230 mm
- Ready for use: Batteries included, 2×CR2032

FGE 10K-3S05

- Large backlit LED display, digit height 22 mm
- Overall dimensions W×D×H 272×250×22 mm
- Dimensions of glass weighing plate W×D 272×205 mm
- Ready for use: Batteries included, 3×1,5 V AAA
- Note: The models are delivered in a set of 5 units. i.e. the price given in the table refers to 5 items. Cannot be delivered individually. The calibration price refers to one single balance



Model	Weighing capacity	Readability	Option	
			DAkkS Calibr. Certificate	
	[Max]	[d]	DAkkS	
KERN	kg	g	KERN	
FGE 5K-3S05	5	1	963-127	
FGE 10K-3S05	15	1	963-128	

KERN & SOHN GmbH · Ziegelei 1 · 72336 Balingen · Germany · Tel. +49 7433 9933-0 · www.kern-sohn.com · info@kern-sohn.com

KERN BALANCES & TEST SERVICES 2022

Pictograms

Internal adjusting: Quick setting up of the balance's accuracy with



internal adjusting weight (motordriven)



Adjusting program CAL:

For quick setting up of the balance's accuracy. External adjusting weight required



Easy Touch:

Suitable for the connection, data transmission and control through PC or tablet.

Memory: MEMORY

Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.



Alibi memory:

Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard.

Data interface RS-232:

• 6550.• To connect the balance to a printer, PC or RS 232 network



RS-485 data interface:

To connect the balance to a printer, PC or other peripherals. Suitable for datatransfer over large distances. Network in bus topology is possible



USB data interface:

To connect the balance to a printer, PC or other peripherals

Bluetooth* data interface:

To transfer data from the balance to a printer, PC or other peripherals



*

WiFi data interface:

To transfer data from the balance to a printer, PC or other peripherals





Control outputs (optocoupler, digital I/O): To connect relays, signal lamps, valves, etc.



Analogue interface:

to connect a suitable peripheral device for analogue processing of the measurements



Interface for second balance:

KERN – Precision is our business

For direct connection of a second balance



balance calibration.

ment in Europe

Range of services:

characteristics) for test weights

· Calibration of force-measuring devices

Network interface:

For connecting the scale to an Ethernet network

To ensure the high precision of your balance KERN offers you the the appropriate test weight in the international OIML error limit classes E1-M3 from 1 mg - 2500 kg. In combination with a DAkkS calibration certificate the best pre-requisite for proper

The KERN DAkkS calibration laboratory today is one of the most modern and bestequipped DAkkS calibration laboratories for balances, test weights and force-measure-

Thanks to the high level of automation, we can carry out DAkkS calibration of balances, test weights and force-measuring devices 24 hours a day, 7 days a week.


· Volume determination and measuring of magnetic susceptibility (magnetic

· Conformity evaluation and reverification of balances and test weights

· Database supported management of checking equipment and reminder service

· DAkkS calibration certificates in the following languages DE, EN, FR, IT, ES, NL, PL

· DAkkS calibration of balances with a maximum load of up to 50 t · DAkkS calibration of weights in the range of 1 mg - 2500 kg

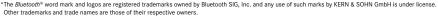



KCP

PROTOCOL

GLP/ISO log: GI P With weight, date and time. Only with KERN PRINTER printers.

Piece counting:

connection

digital systems GLP/ISO log:

Reference quantities selectable. Display can PCS be switched from piece to weight

KERN Communication Protocol (KCP):

It is a standardized interface command set for

KERN balances and other instruments, which

devices featuring KCP are thus easily integrated


with computers, industrial controllers and other

The balance displays serial number, user ID,

weight, date and time, regardless of a printer

allows retrieving and controlling all relevant parameters and functions of the device. KERN

Recipe level A:

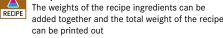

Recipe level B:

Internal memory for complete recipes with name RECIPE and target value of the recipe ingredients. User guidance through display

Totalising level A:

Η' The weights of similar items can be added SUM together and the total can be printed out

Percentage determination:

Determining the deviation in % from the target value (100 %)

Weighing units:

Can be switched to e.g. nonmetric units. See UNIT balance model. Please refer to KERN's website for more details



Weighing with tolerance range:

(Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model

Hold function:

^-(Animal weighing program) When the weighing MOVE conditions are unstable, a stable weight is calculated as an average value




Protection against dust and water splashes IPxx:

The type of protection is shown in the pictogram.

Suspended weighing: ÷. Load support with hook on the underside of the UNDER balance

Battery operation:



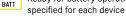



Ready for battery operation. The battery type is

Rechargeable battery pack: Rechargeable set



Universal plug-in power supply:

with universal input and optional input socket MULTI adapters for A) EU, CH, GB; B) EU, CH, GB, USA; C) EU. CH. GB. USA. AUS



Plug-in power supply:

230V/50Hz in standard version for EU, CH. On request GB, USA or AUS version available

Integrated power supply unit:



Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request

1	DMS

Weighing principle: Strain gauges:

Electrical resistor on an elastic deforming body



Weighing principle: Tuning fork:

A resonating body is electromagnetically excited, causing it to oscillate



Weighing principle: Electromagnetic force compensation:

Coil inside a permanent magnet. For the most accurate weighings



Weighing principle: Single cell technology:

DAkkS calibration possible (DKD):

is shown in days in the pictogram

Factory calibration (ISO):

Package shipment:


Pallet shipment:

The time required for DAkkS calibration

The time required for Factory calibration

The time required for internal shipping preparations

The time required for internal shipping preparations

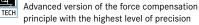

Verification possible: The time required for verification is specified in the pictogram

М +3 DAYS

DAkkS

+3 DAYS

ISO

+4 DAYS

1 DAY

ò

2 DAYS

Your KERN specialist dealer: